

Shade Installation Instructions

For Rook Floor Lamp 23-4901 & 23-4901C



Page 1 of 3


Install Dimmer Rod (Figure 1)

Component Parts

- A Dimmer Rod
- B Dimmer Knob

1. Carefully unpack the lamp from the carton.
2. Apply a drop of the supplied thread locking compound to the internal threads at the top of the dimmer knob (B). Run dimmer rod (A) down thru grommets and thread into dimmer knob (B). Note: Application of the thread locking compound is necessary to prevent the dimmer rod from loosening. Be certain to apply the compound.

(Figure 1)

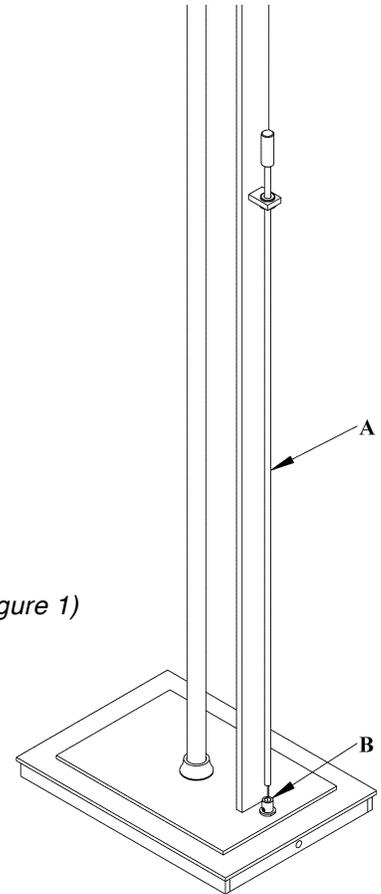


To Install Glass (Figure 2)

Component Parts

- C Socket
- D Glass
- E Retaining Ring (2)
- F Retaining Ring Tool

1. Remove retaining rings (E) from socket (C). *Retaining Rings are shipped installed.*
2. Place glass (D) over socket (C).
3. Using provided retaining ring tool (F) thread the first retaining ring (E) onto socket (C) until it reaches the bottom of the glass (D).
4. Using provided retaining ring tool (F) thread the second retaining ring (E) and tighten until it is snug against the first retaining ring.
5. Install bulb. *“C” version bulb is included.*

(Figure 2)

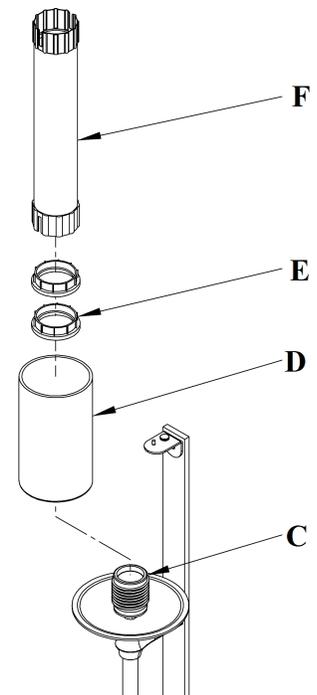

Shade Installation Instructions

For Rook Floor Lamp 23-4901 & 23-4901C

C79

Page 2 of 3


(continued)

To Install Diffuser & Shade (Figure 3)

Component Parts

- G Finial
- H Washer
- I Diffuser
- J Shade
- K Thumb Screw
- L Diffuser Bracket
- M Fixture Bracket
- N Threaded Stud

1. Remove thumb screw (K) from fixture bracket (M).
Save for later use.
2. Attach diffuser bracket (L) to fixture bracket (M) using thumb screw (K). Align diffuser bracket (L) to be centered on the fixture and tighten thumb screw (K).
3. Slip shade (J), diffuser (I) and washer (H) onto threaded stud (N).
4. Thread finial (G) onto threaded stud (N) and tighten until snug. *Be careful not to over tighten.*

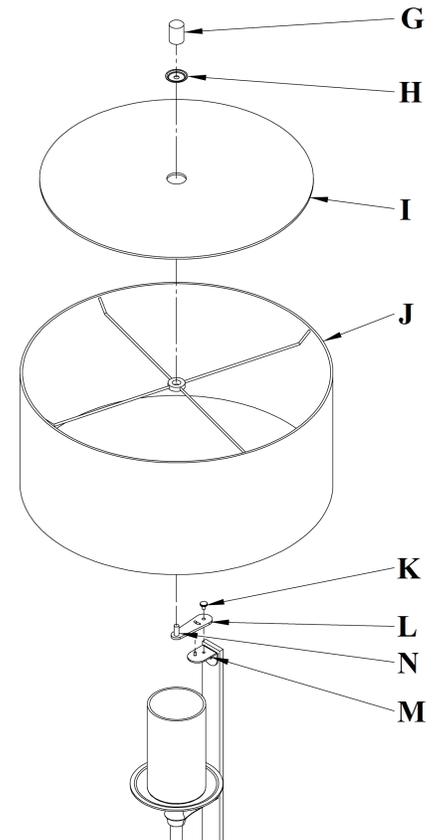


(Figure 3)

To Replace Bulb (Figures 4, 5 & 6)

Component Parts

- G Finial
- H Washer
- I Diffuser
- J Shade
- K Thumb Screw
- L Diffuser Bracket

1. Remove finial (G) followed by washer (H) and diffuser (I).
2. Loosen thumb screw (K).
3. Slide diffuser bracket (L) to access the bulb (Figure 5).
4. Replace bulb.
5. Slide diffuser bracket (L) back to original location and tighten thumb screw (K).
6. Reinstall diffuser (I), washer (H) and finial (G).

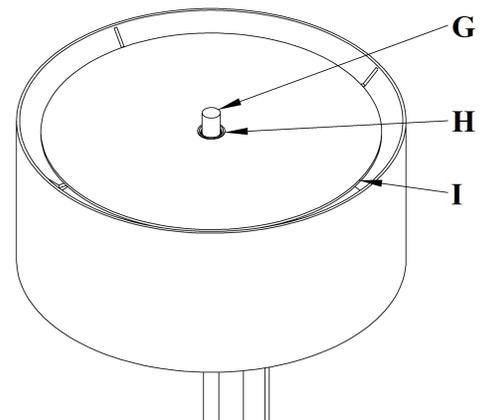


(Figure 4)

Shade Installation Instructions


For Rook Floor Lamp 23-4901 & 23-4901C



Page 3 of 3
(continued)

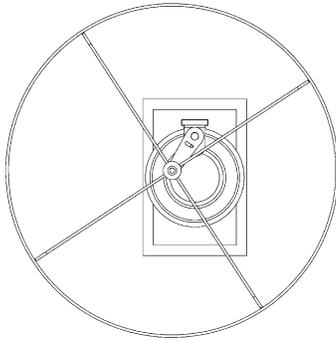


Position of diffuser plate to replace bulb.

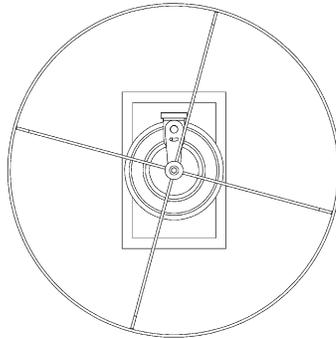

Position of diffuser plate after bulb replacement

(Figure 6)

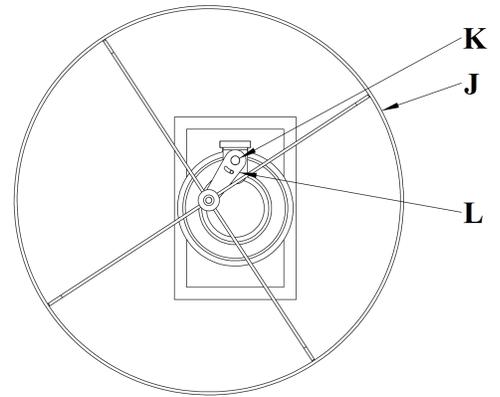

(Figure 5)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.