




# Installation Manual - 230.2693T

## 3/4" Thermostatic Valve Trim

Use With TVH.2693, TVH.2717F & TVH.2705F Valves

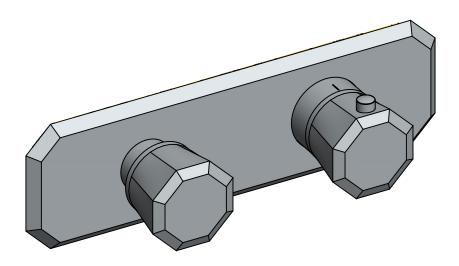

#### **BEFORE YOU BEGIN**

- You must observe all local plumbing laws and codes.
- Do not install this valve if it does not meet local plumbing codes.
- Shut off the main water supply.




#### **TABLE OF CONTENTS**


#### **NOTICE TO HOMEOWNER**

- We recommend that this product is installed by a qualified professional plumber.
- Please check this product immediately to ensure that it has
  not been damaged and is complete. Before installation, please
  make sure this product is the correct model and you have all
  the parts required for installation and use.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the product.
- Turn off water supply before commencing work.
- Please read these instructions carefully and retain for future reference.




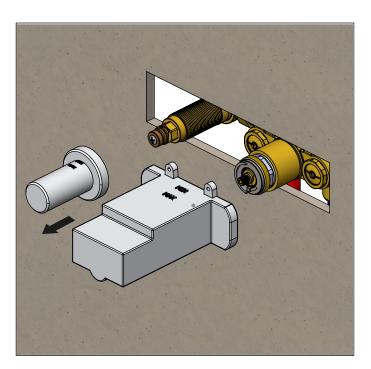


Remove mud guards

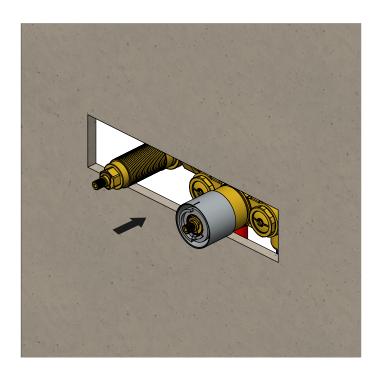

A hard push may be required

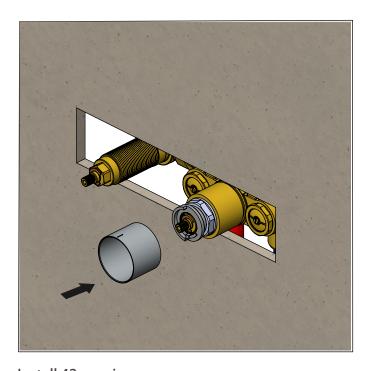


Install 42mm ring

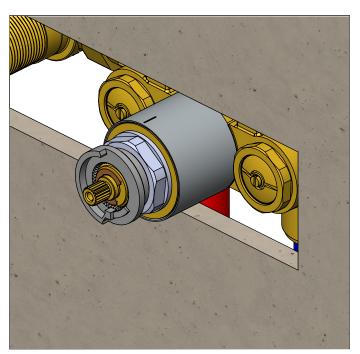


The 42mm ring must be flush. Otherwise the handle will not fit properly




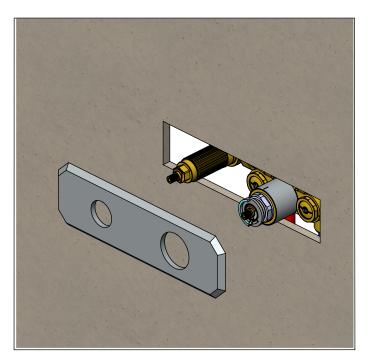


Insert trim plate

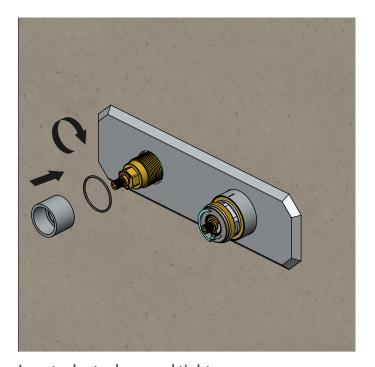

Insert adapter base and tighten

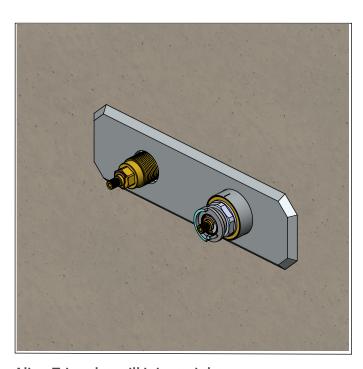


Align Trim plate till it is straight

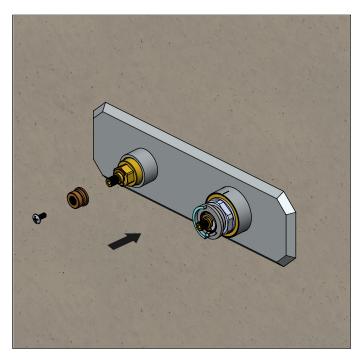


Insert centering knob & screws




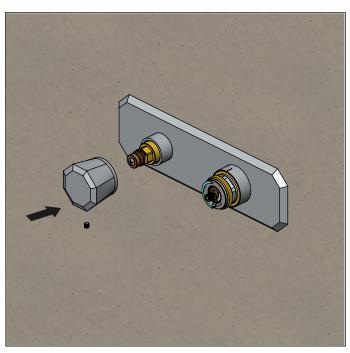


Insert volume handle. Tighten hex screw & insert cover button

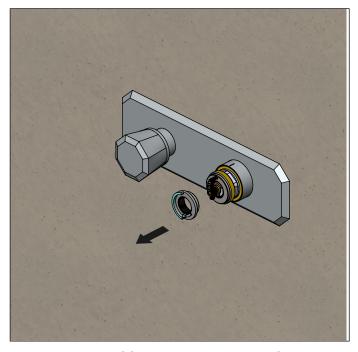

Remove anti-scald temperature ring and reinsert in correct position - see next image

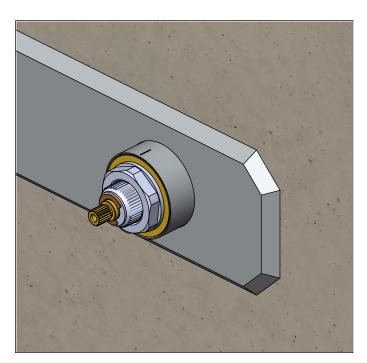


Caliberate cartridge before inserting temperature handle. Red marks must align.

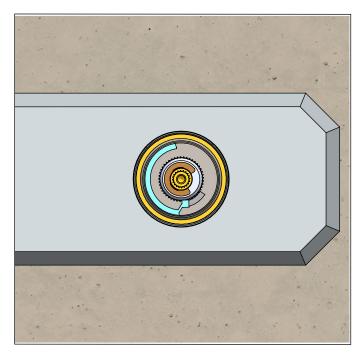


Correctly re-insert anti-scald temperature ring in the right position



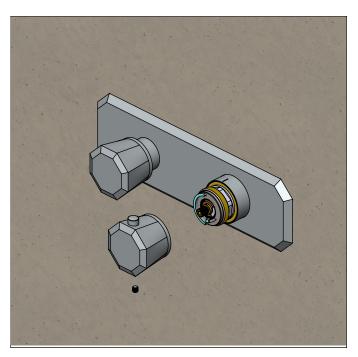

Insert temperature handle. Tighten hex screw & insert cover button

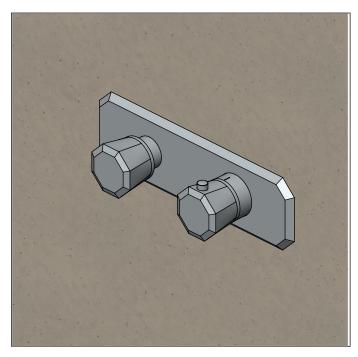

This photo shows a completely installed trim