

## H503101 H503102 MEADOW SCONCE

### ASSEMBLY AND MOUNTING INSTRUCTIONS

#### **GENERAL**

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

#### **INSTALLATION**

STEP 1.	Pull the wires out from the outlet box, and install mounting plate onto the outlet box using the (2) mounting screws.		CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH!
STEP 2.	Fasten bare ground wire to ground wire from the wall outlet	STEP 5.	Carefully place connections back into the outlet box.
	box (usually green or copper color) or connect ground wire to green screw on the mounting plate.	STEP 6.	Place back plate over the mounting plate and secure with set screws.
STEP 3.	Connect the neutral (white) fixture wire coming from the	STEP 7.	Unscrew the ring to release the glass fitter.
	fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap	STEP 8.	Install the lamp(s). The fixture is rated for 60 watt type G25 lamp. <b>DO NOT EXCEED RECOMMENDED WATTAGE!</b>
	the wire nut with electrical tape.	STEP 9.	Tilt and rotate the glass shade so that the glass holder into
STEP 4.	Repeat the previous step with the hot (black wires). Make		glass shade .Drop glass fitter and secure with the ring .
	sure there are no exposed wires or strands that could	STEP 10.	Restore power to the circuit at breaker or fuse box.

### DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

cause a dangerous short circuit.

provided by your local electrical distributor, home center, or hardware store.

#### **CLEANING**


Please clean with a soft, dry cloth ONLY! Do not use cleaning products.

**FAILURE TO CONNECT THE APPROPRIATE WIRES** 



# H503101 H503102 MEADOW SCONCE

## ASSEMBLY AND MOUNTING DIAGRAM

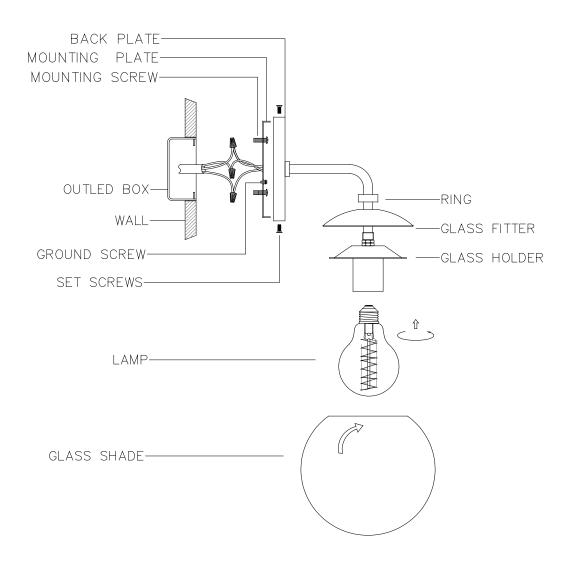

## WIRE NUT/TAPING DIAGRAM

