


95 Cantiague Rock Road, Westbury, NY 11590 • toll free: 1.800.888.4470 fax: 516.931 .1254 • info@crystorama.com • www.crystorama.com

MODEL#: **513-GA**ASSEMBLY AND DRESSING INSTRUCTIONS

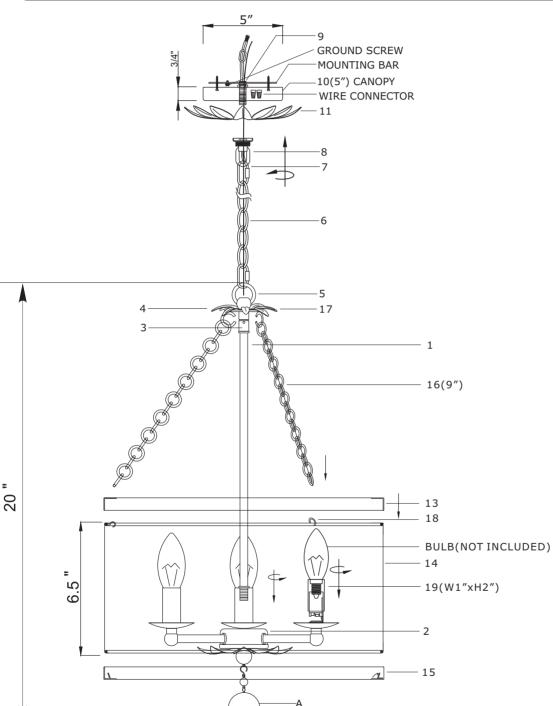



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes






You will need 3 Candelabra bulbs.40 Watts recommended 60 Watts max.Bulb not included.

USE LED FOR EXTENDED USE

Assembly Instructions:

- Pass wire through center rod
 [1] and screw it into cluster
 [2]. Then through swivel[3],
 top leaf assembly[4], fixture
 loop[5], chain[6], last screw
 [3] into[1].
- 2)Open the quick link[7], circled [6] and screw collar[8] together.
- 3)Screw the threaded pipe[9] from the canopy[10] inside through the[10] and two decorative metal leaves[11], into[8].Then pass wire from [6] to [9].
- 4)Put over the metal band ring[13] on the top of the shade[14],open the clip in the[15] to hold the bottom of [14].
- 5)Take one of the decorative chains[16], the top hanging the hook[17], the bottom hanging hook[18]. The same is true for the other two [16].
- 6)Put the candle sleeve[19] into the socket, Insert recommended bulb (not applied).
- 7)Hang the metal ball"A" under the [2].



14"