


95 Cantiague Rock Road, Westbuy NY 11590 | P: 800.888.4470 | F: 516.931.1254 | info@crystorama.com | CRYSTORAMA.com

MODEL#: **518-GA**ASSEMBLY AND DRESSING INSTRUCTIONS

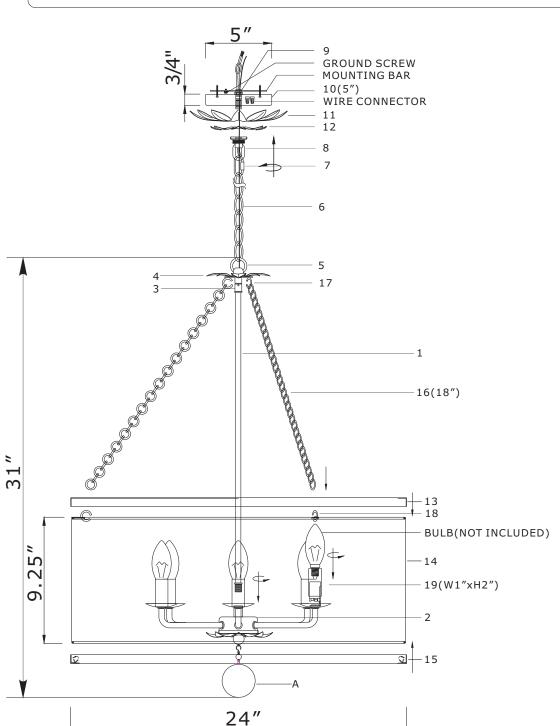



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes





You will need 6 Candelabra bulbs.40 Watts recommended 60 Watts max.Bulb not included.

USE LED FOR EXTENDED USE

Assembly Instructions:

- Pass wire through center rod
 [1] and screw it into cluster
 [2]. Then through swivel[3],
 top leaf assembly[4], fixture
 loop[5], chain[6], last screw
 [3] into[1].
- 2)Open the quick link[7], circled [6] and screw collar[8] together.
- 3)Screw the threaded pipe[9] from the canopy[10] inside through the[10] and two decorative metal leaf[11], [12] into[8].Then pass wire from [6] to [9].
- 4) Put over the metal band ring[13] on the top of shade [14], open the clip in the[15] to hold the bottom of [14].
- 5)Take one of decorative chains [16],the top hanging the hook [17],the bottom hanging[18]. This same is true for the other two [16].
- 6)Put the candle sleeve[19] into the socket, Insert recommended bulb (not applied).
- 7) Hang the metal ball"A" under the [2].