

CRYSTORAMA




crystorama.com


LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #8116-AG

WARNING


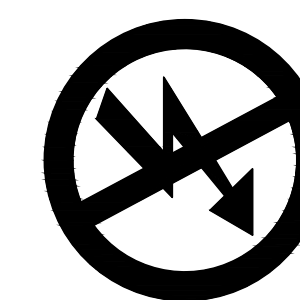


Electrical Danger

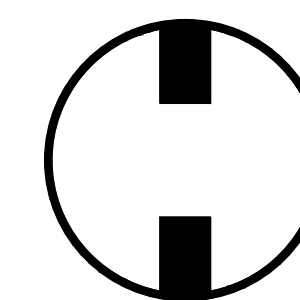

Turn Power Off



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

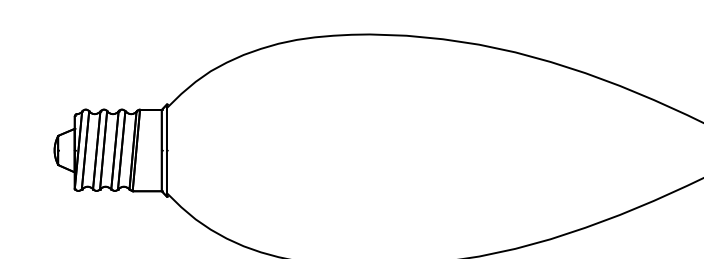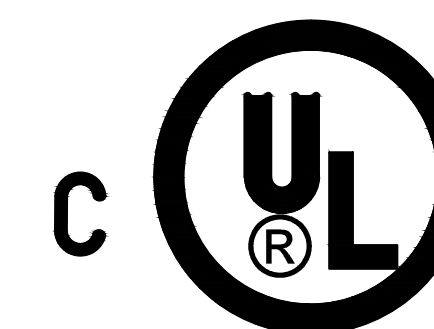

You will need 6-Candelabra Bulb
60 watts Max Bulb not included
USE LED BULBS FOR EXTENDED USE

How to Install

1. Insert the shade spoke in between top and bottom knurled nut.
2. Secure the shade by twisting the top knurled nut.
3. Slide the crystal bobèche over the socket.
4. Install the recommended bulbs into each socket.
5. Screw the crystal ball into the bottom frame.

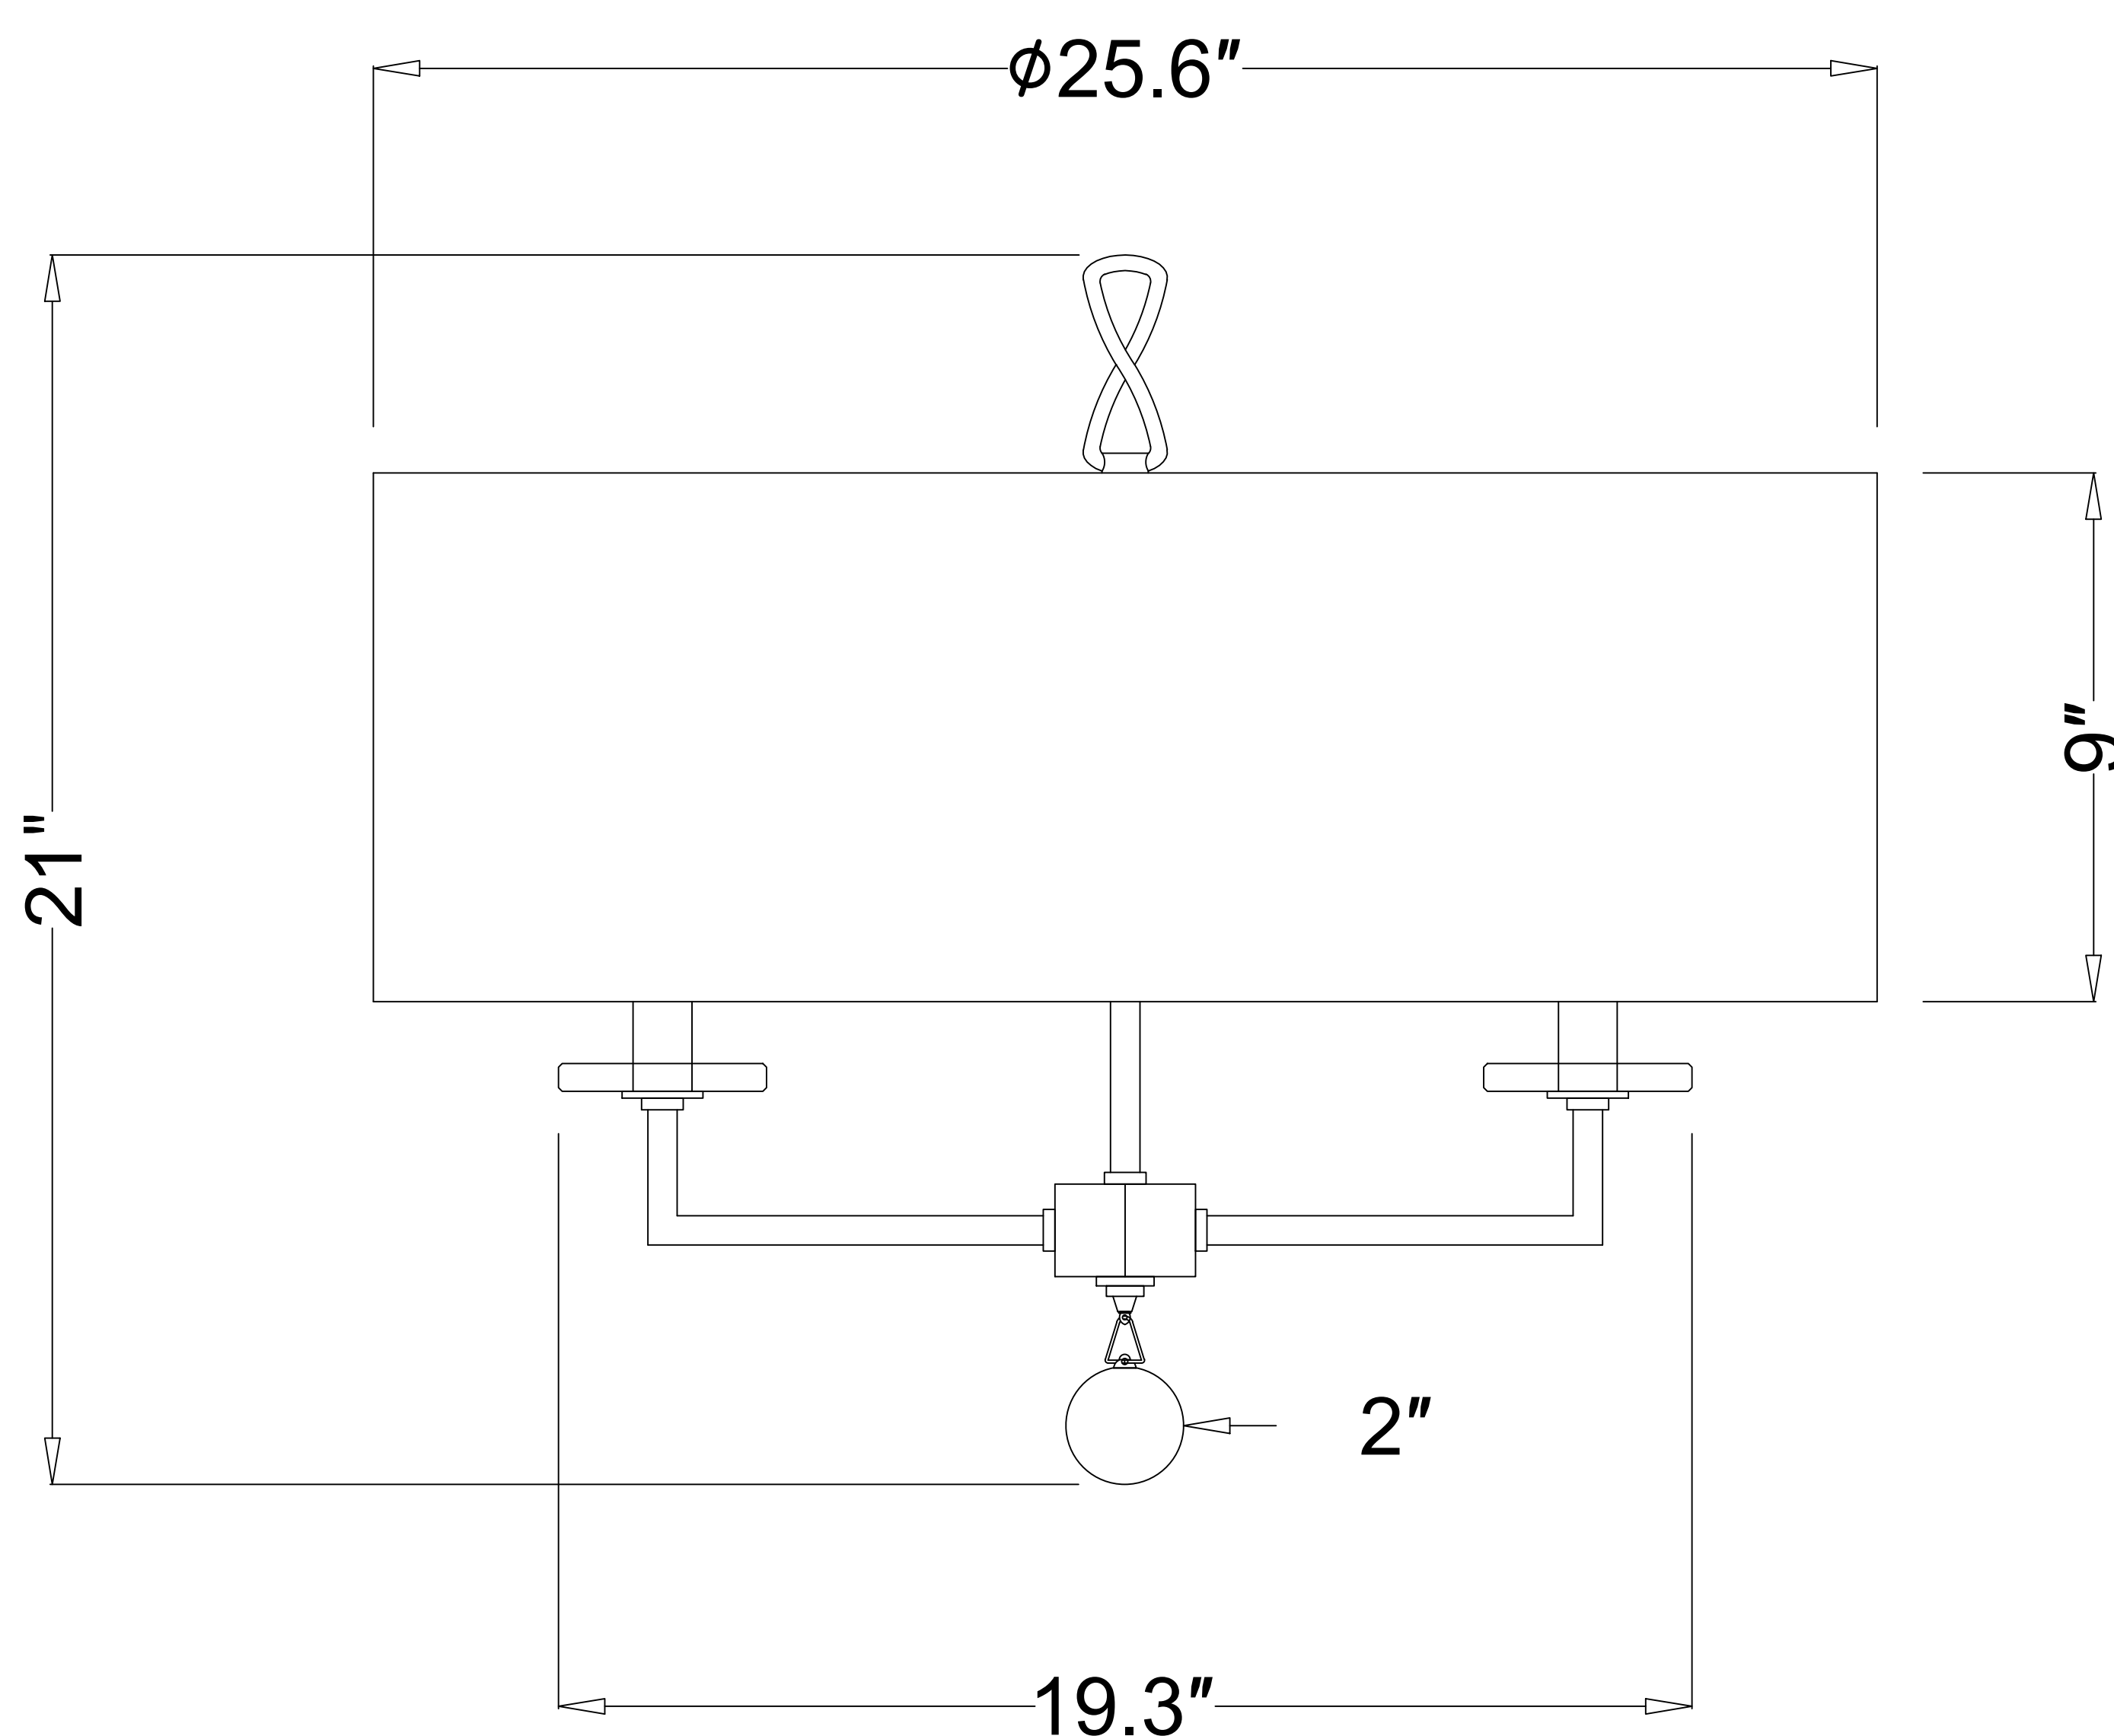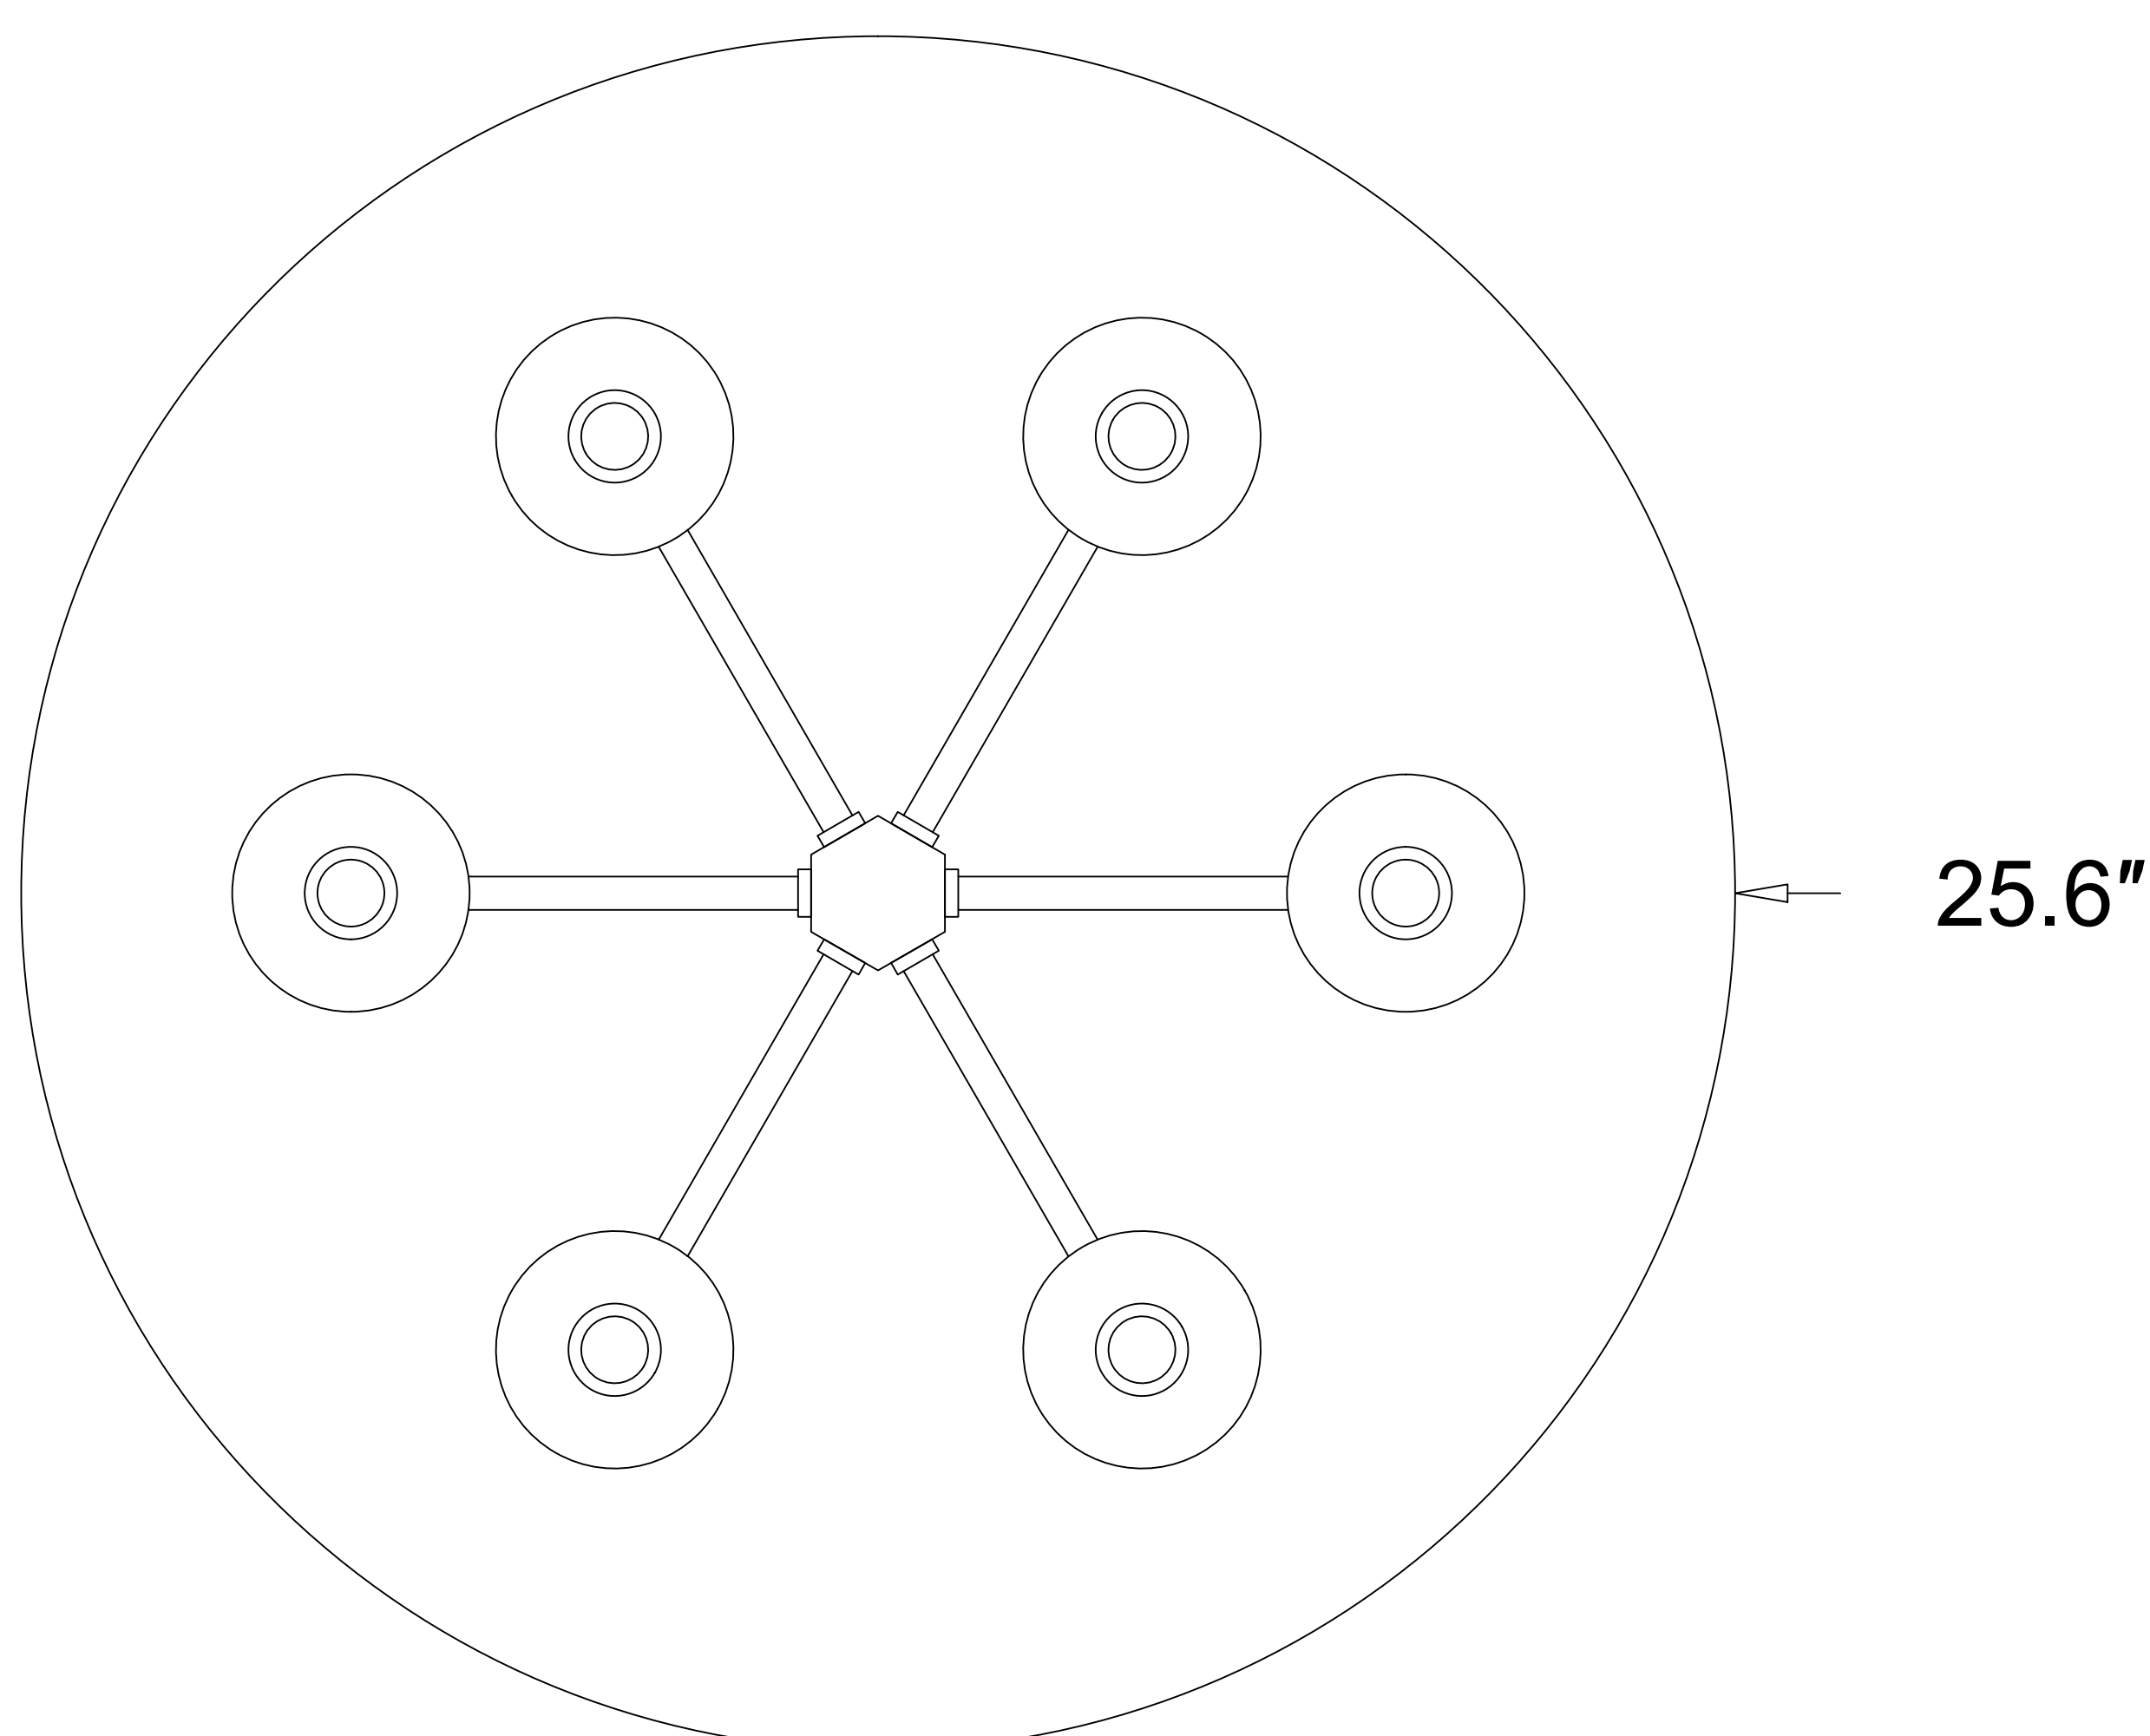

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA



crystorama.com

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #8116-AG

Part Number

Part Numbers

- A. Mounting Hardware
 - (1) Mounting Plate
 - (2) Mounting Screws
 - (3) Wire Nut
- B. (1) Canopy
 - XMO8116AGCAN5IN; $\phi 5" \times 0.75" h$
- C. (1) Chain
 - XMO8116AGCHA5MM; 72" L x $\phi 5.0mm$
- D. (1) Fixture Loop
- E. (2) Knurled Nut
- F. (1) Fabric Shade
 - XMO8116AGSHA25.6IN; $\phi 25.6" \times 9" h$
- G. (6) Socket
- H. (6) Crystal bobèche
- I. (1) Crystal ball

