

# Assembly Instruction Sheet #IS-1015P26 For Style 1015P26


**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (19) E12 60W Medium(Bulb Included)  
**Estimated Assembly Time:** 10-20 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

**Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

**Package Contents**


- B Middle Rod
- B1 4" 2pcs
- B2 6" 1pcs
- B3 12" 9pcs
- A Fixture Body x1
- D Aluminium tubex19
- C Ceiling Canopy x1

**STEP 1 - Release Mounting bracket from Ceiling Canopy.**

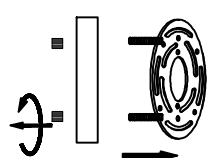



**Figure 1**

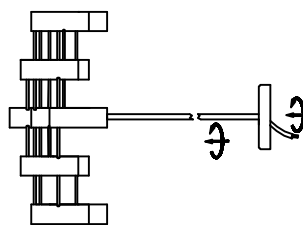
**STEP 2 - Install Rods, Ceiling Canopy to Fixture Body**



**Figure 2**


Hardware Contents	
PART DESCRIPTION	QUANTITY
BB Wire nut	2pcs
CC Outlet Box Screw	2pcs
BB	
CC	

**STEP 3 - Attach Mounting bracket to Outlet Box**  
 A Press the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (CC). Tighten until snug.

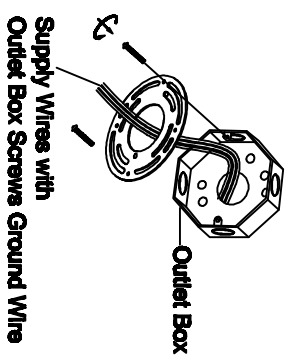


**Figure 3**

**STEP 5 - Install Ceiling Canopy to Ceiling**

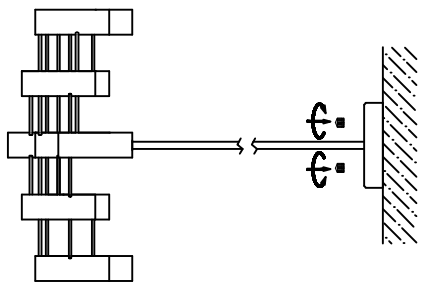


**Figure 5**

**STEP 4 - Wire Connections**  
 A Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

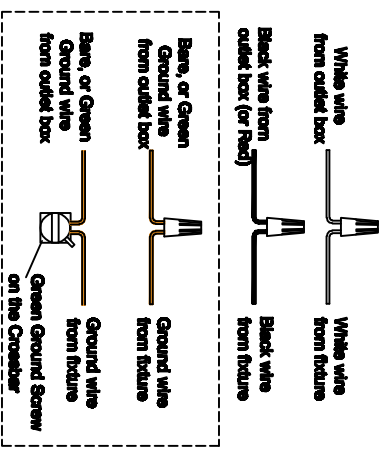

**Figure 4**

**STEP 6 - Install Bulbs and Aluminium tube.**

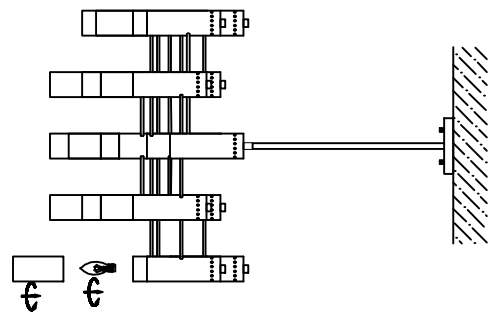

**Figure 6**