

Assembly Instruction Sheet #S- 8003C10 For Style 8003C10

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (2) E12 Bulb 60W Maximum (Not Included).
Estimated Assembly Time: 15-30 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

-  24mmx1PCS
-  50mmx1PCS
-  12mmx1PCS

A Fixture Body x1 **T** Crystal x24




B Bobeche x1 **Z** Crystal x1



C Rod x1

Hardware Contents

PART DESCRIPTION	QUANTITY
BB Wire nut	2pcs
CC Outlet Box Screw	2pcs

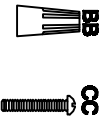

STEP 1 - Remove Mounting bracket from Ceiling Canopy.

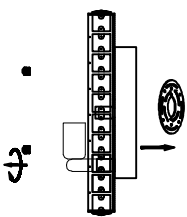


Figure 1

STEP 2 - Attach Mounting bracket to Outlet Box

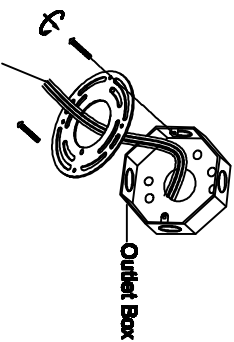


Figure 2

Supply Wires with Outlet Box Screws Ground Wire

STEP 3 - Wire Connections

A. Use standard wire connections to make all wire connections. Twist connections and wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

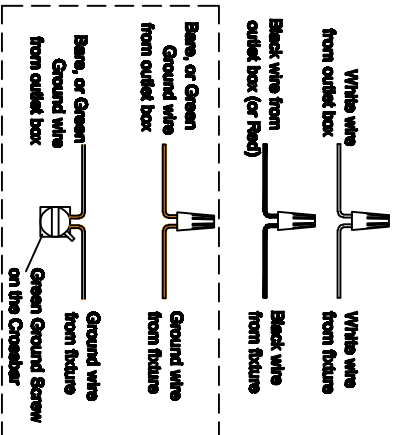


Figure 3

STEP 4 - Install Ceiling Canopy to Ceiling


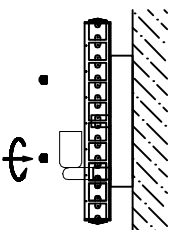


Figure 4

STEP 5 - Install Bulbs.

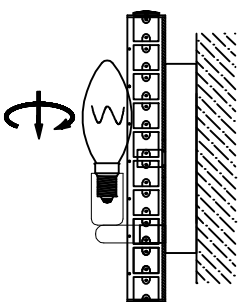

STEP 6 - Install Bobeche and Crystal.

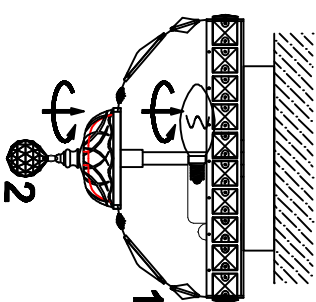


Figure 6