


Collection: KORA

Installation manual for: LD5016D13 D13"H10.9"L3

Installation instructions:

- 1.Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3."E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws(P2) in side of top unit the mounting bracket.
- 6. Fix the loop (P3) to screw tube, then cover the canopy (P4) and fix it by canopy ring(P5).
- 7. Hanging crystal string (A-B-A-B... ...) on lampbody(P11).
- 8.Install the bulbs(not included) into the lamp fixture.

The end!

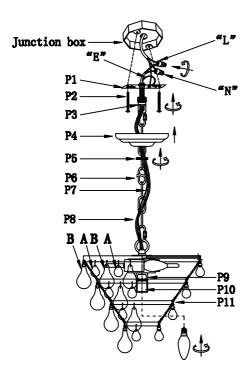

PARTS LIST

| IIMID DIDI | | | | | |
|------------|----------|-----------------------------------|-----|-------|------|
| part | picture | Description | Qty | Check | list |
| P1 | | L4" Mounting bracket | 1 | | |
| P2 | — | 5/32-32 Screw | 2 | | |
| Р3 | • | Canopy loop (Canopy part) | 1 | | |
| P4 | | ø5.3″ canopy plat | 1 | | |
| P5 | • | Canopy ring (Canopy part) | 1 | | |
| P6 | | L59"CHAINO4P Plain Design | 1 | | |
| P7 | \ | ground wire | 1 | | |
| P8 | ~ | Power Cord 79" SPT-1-18# Clear | 1 | | |
| P9 | | D1.2"*L2" metal lampcap | 3 | | |
| P10 | | E12 lampholder | 3 | | |
| P11 | | D11.8"*H8.8" lampbody | 1 | | |
| A | Ô | H1.2" Crystal | 40 | | |
| В | <u>*</u> | H2. 4" Crystal | 40 | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire