





Linear Vanity Cabinets: 210-V59D-GW 210-V59D-WLT 210-V59D-WW

Assembly / Installation Instructions for CS-Series Tops

CS-Series Tops: CS-368-DGG CS-368-GW

Materials for Installation:

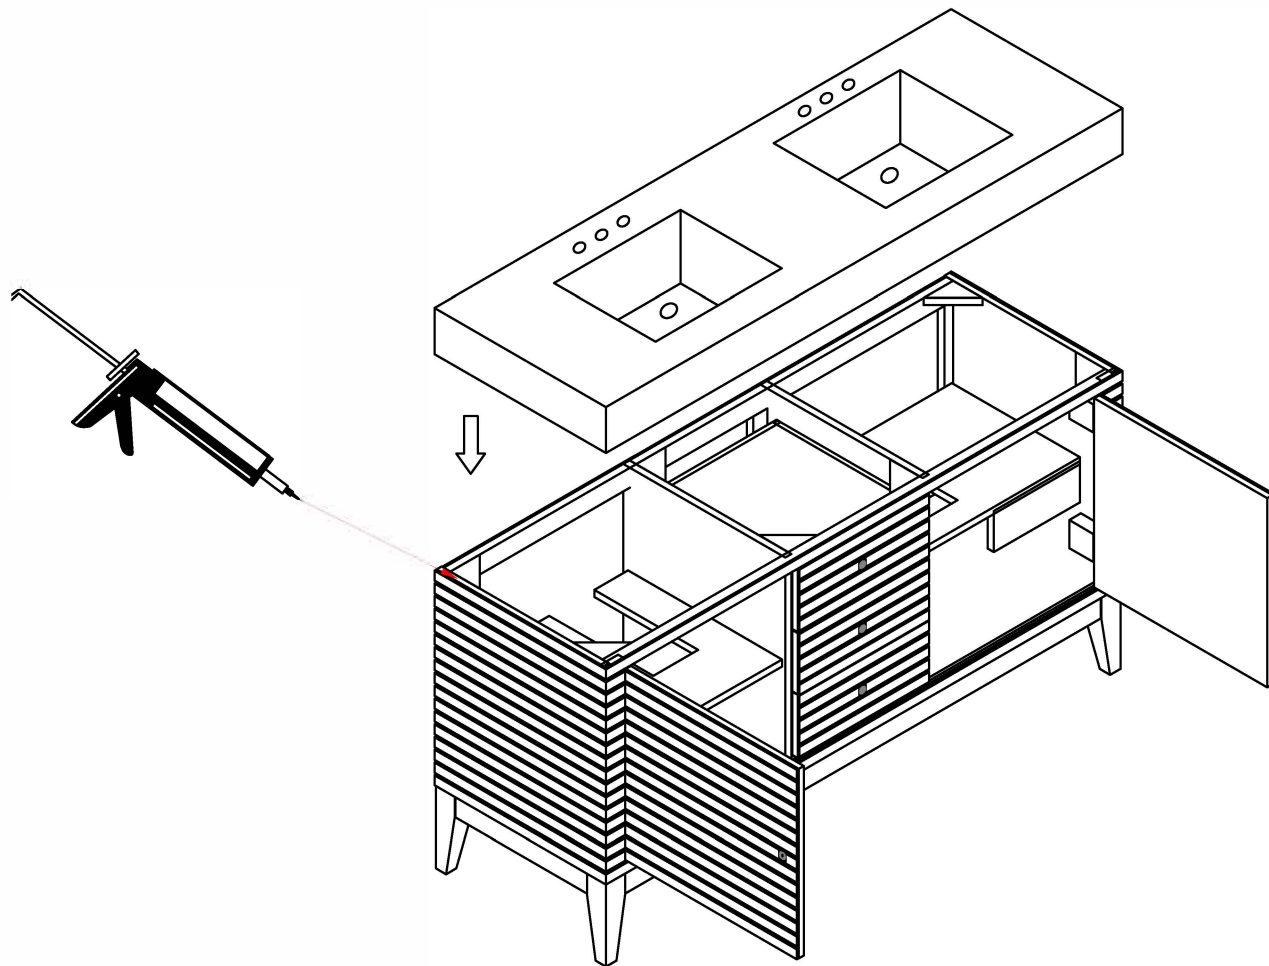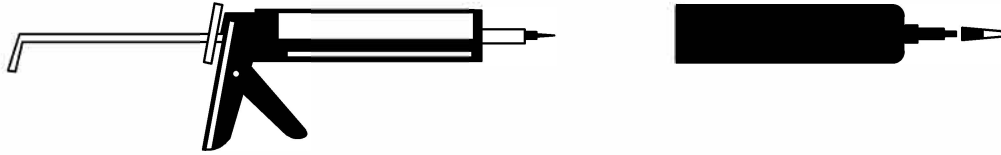

Step Notes:

Properly align and secure the countertop to the cabinet with high quality adhesive.