
C66701 INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.Have your fixture installed by a qualified licensed
- electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference. **Technical Support:**1-844-628-8368

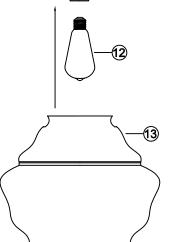

Please Note:

• All Matteo Lighting fixtures come with pre-wired module(s).

• Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE

- 1 Ensure main supply is switched off.
- Pit round mounting bracket(2) onto junction box with self-tapping screw(3).
- S Connect rods(9,8,7,6) with canopy(4) and fixture(10).
- Connect wires(1) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- **5** Fix canopy(4) onto mounting bracket with metal part(5).
- 6 Install the lamps(12) firmly into lampholder.
- Fix glass shade(13) onto cover(10) and lock them with finials(11).
- Reconnect power.

