


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0283 / P0284

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and ground requirements.
2. Read and save this instruction.

Hardware Package (included):

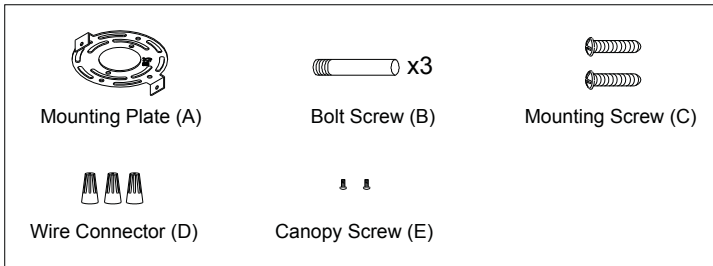

Installation Steps


Turn off the power at fuse or circuit box.

1. Assembling the main fixture.
 - a. Lift up glass shade(H) and screw in bolt screws(B) into the glass fitter.
 - b. Adjust the cord length by means of cord grip(G) and strain relief(F) until the desired hanging height is met. You may need to cut the excess wire. You will need at least 9 inches of wire to work with. Prepare wire by stripping 3/4 in. of insulation from wire ends using wire strippers (not included). See Figure 1.
 - c. Attach the mounting plate(A) to the outlet box using two mounting screws(C).
2. Connecting the wires.

Make wire connections using the wire connectors(D):

 - a. The black wire from the fixture to the black wire from the power source.
 - b. The white wire from the fixture to the white wire from the power source.
 - c. Loop the supply ground wire around the ground screw on the mounting plate and tighten it in place. Connect the fixture ground wire to the supply ground wire using a wire connector(D).
3. Mounting the fixture.
 - a. Carefully arrange excess wiring and wire connectors (D) within canopy(I) at top of fixture.
 - b. Align holes in edge of canopy with holes at ends of mounting plate(A), then secure with canopy screws(E).


Turn on the power at fuse or circuit box.

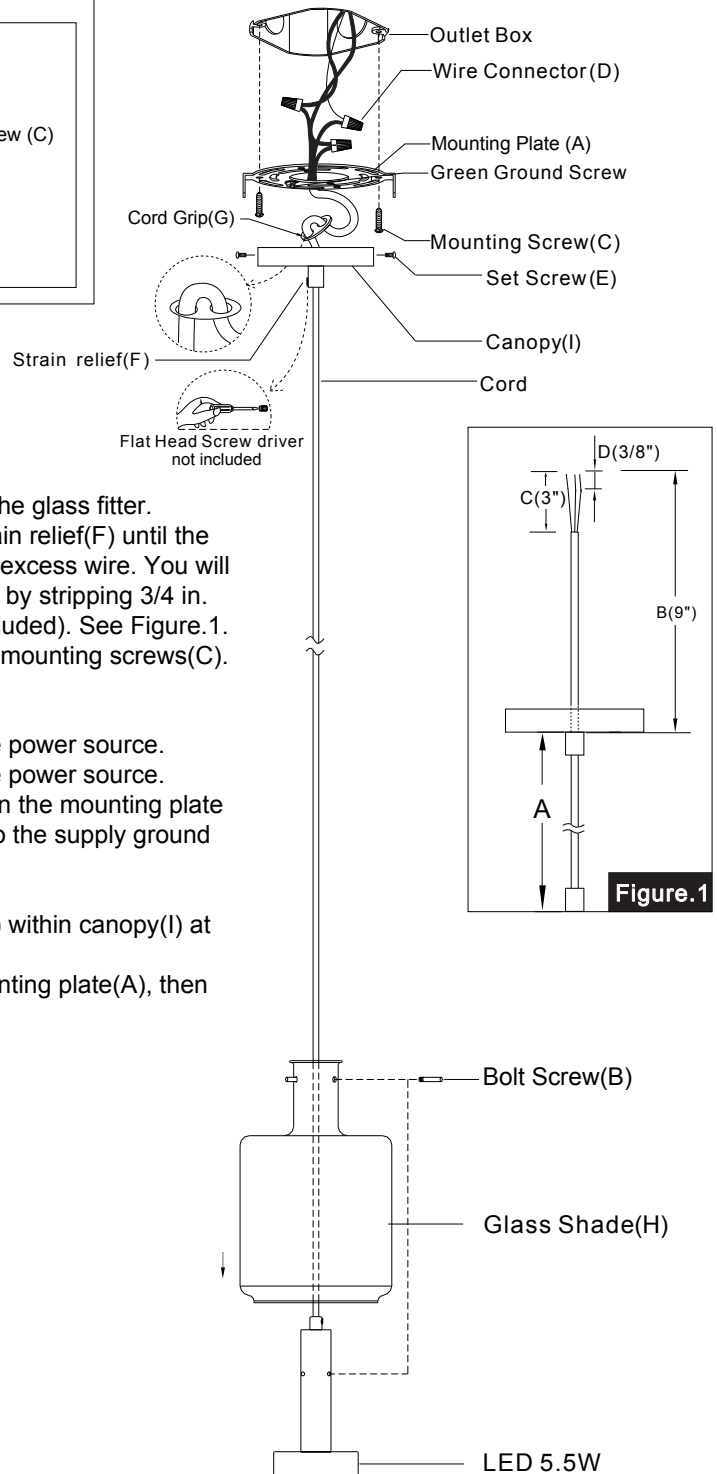

Note: Suggested dimmers are Lutron: MSCL-OP153MH, MACL-153MH, DVWCL-153PH, TGCL-153PH, SCL-153PH.

The following parts are available for re-order if damaged or missing.


Spare Parts List:

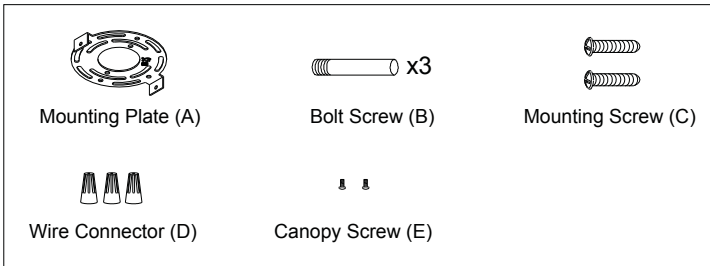

→ Mounting Hardware (1 SET)

6029MM for P0283(Satin Nickel)

6030MM for P0284 (Natural Brass)

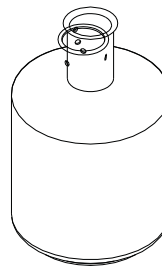

→ Glass shade
10049CE (1PC)

